


# HDD-ROM

## Serial ATA HDD-ROM

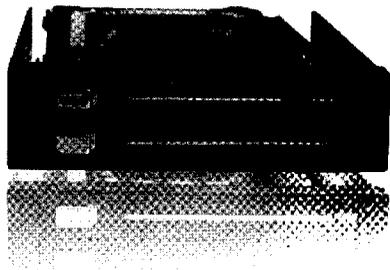


# User's Manual

## Specifications

Product name: HDD-ROM  
 OS: windows Vista/XP/2000/98SE/ME  
 Mac9.3 higher  
 Interface: Supports SATA (3.0Gb/s)  
 Fits all 2.5" SATA hard disk  
 Supports hot swap  
 Weight: 282.5 g  
 Dimensions: 134 (L) × 102(W) × 24(H)mm  
 Operation Temperature: 0℃~55℃


### Front panel

1. Switching key
2. HDD front panel
3. HDD LED indicator

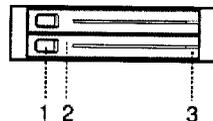

### Rear panel

1. SATA power connector (15P)
2. SATA data connector(7P)
3. LED access port (4P)

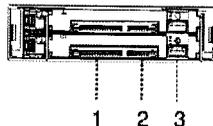

## Package Content



Accessories	Quantity
HDD-ROM	1
SATA 7PIN Data Cable	2
SATA 15P to 4P+4P Power Cable	2
Screw	4
Manual	1

### Switching Key

Press the two keys from left to right to eject the panels.



## Install HDD-ROM

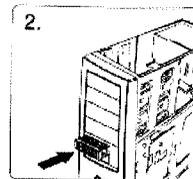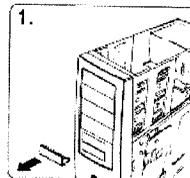

1. Remove the slot cover of an empty 3.5" floppy bay.

2. Carefully insert the HDD-ROM into the bay and

push it inward until the HDD-ROM's screw hole


is aligned with the hole of the bay.

3. Secure the HDD-ROM is packed

with screws, use 2

screws on each side to securely


hold the device.

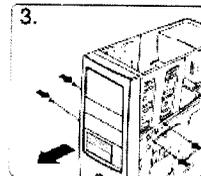

## Connect the HDD-ROM cable

1. Insert the SATA 15P conn. into the HDD-ROM's 15P conn., Connect the big power 4P connector to the Pc's 4P power plug, and the small 4P LED wire connector to the 4P led port at the back of HDD-ROM;


2. Insert one end of the SATA 7P cable to HDD-ROM, another end(7P) to either the mother board or the SATA RAID card:

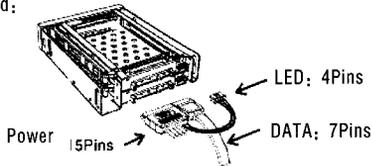


1. Be sure to connect the 4P LED wire, or the LED indicator will not be lighted up.
2. Before connecting the patent 7+15P SATA cable with the PC or with HDD-ROM, please check there is no object on or beside the terminals that may effect the mechanical assembly or become a possible source of an electrical shor.

## Install HDD into HDD-ROM

1. Pull the two keys of HDD ROM gently from left to right to eject the panel.

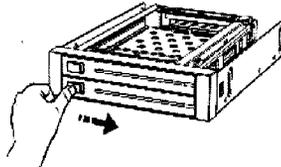

2. Put the 2.5" HDD into the HDD-ROM and close the front panel.

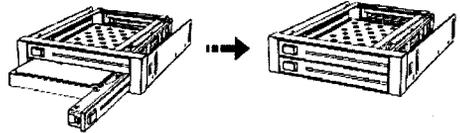

1. After inserting HDD and closing the front door, carefully push the tray until it is seated into position. Excessive force may damage its mechanical parts.
2. If the HDD is inserted backward into the tray, forcing the the device may damage the HDD-ROM.

## Eject HDD from the HDD-ROM

1. Press the two bottoms of HDD-ROM gently to eject the panel.
2. Open the front panel to take out the 2.5" hard drive, and close the upper panel firmly.



1. hard disk is a precised and accurated device, need to care specially. Please read the manual of hard disk for precaution.
2. Do not eject the hard disk while it is busy.
3. Please hold the hard disk by edge, not to touch the PCB on it
4. We will only provide repair service to our product malfunction problems, not be responsible for any software, hardware or data stored within that resulted in damaged to the product