


User Guide for PC with WIN Xp

Operation instructions without application software


1. This product does not need the driver. The PC Camera is plug & play.
2. If need special effect function, please install UVC effect driver.
3. Please click Windows Desktop "My Computer" \USB Video Device. The PC Camera will work.

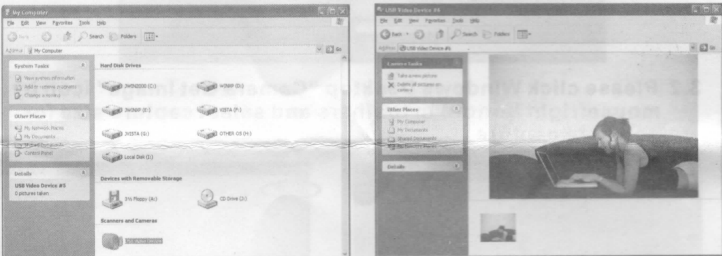


Operation instructions with application software

1.UVC effect driver installation steps.


- 1.1 Note! Please connect USB PC Camera to PC before UVC effect driver installed.
- 1.2 Insert the CD-ROM into your CD-ROM drive. The setup program will start for UVC effect driver installation. To continue, please click "Next".

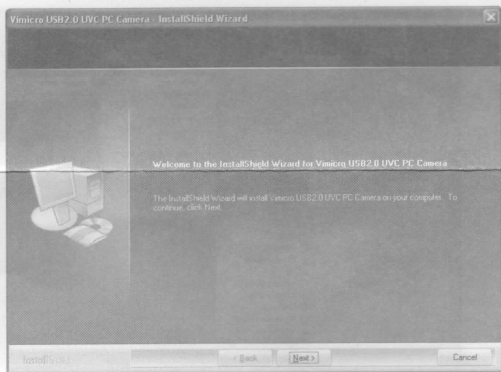


1.3 Installing.

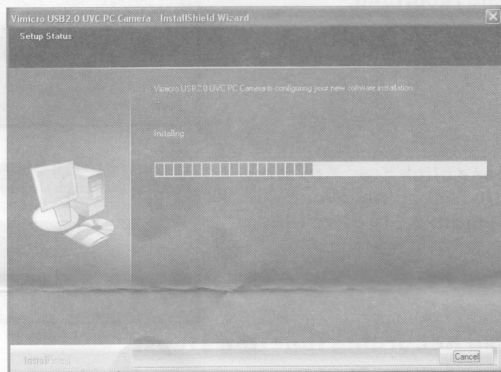


1.4 Click "Finish".

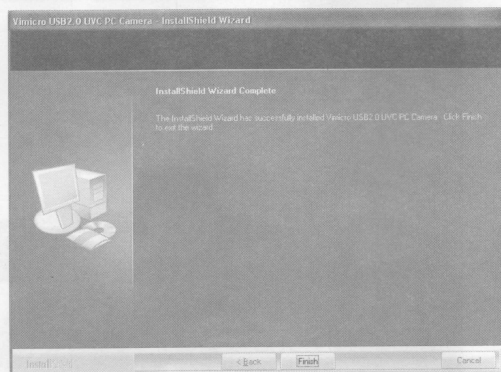

1.5 Check USB PC Camera "Device Manager". (Imaging devices)

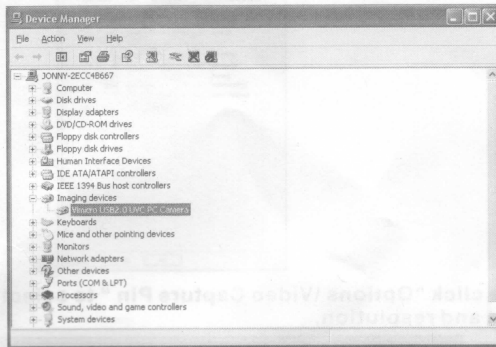

1.6 Please click Start \ Programs \Vimicro USB2.0 UVC PC Camera \amcap to preview

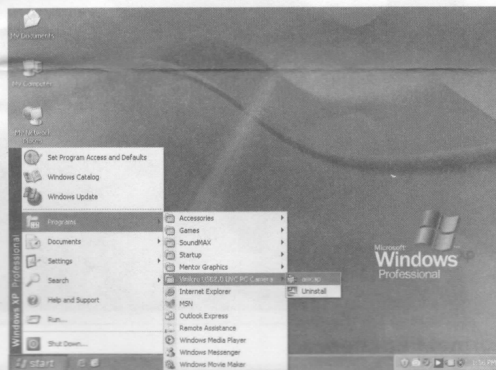


2.Special effect function steps.


- 2.1 Please click " Options \Video Capture Filter " to select special effect function.




● Image Effects and Photo Frames Function.

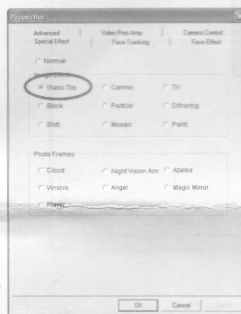


● Face Tracking Function.

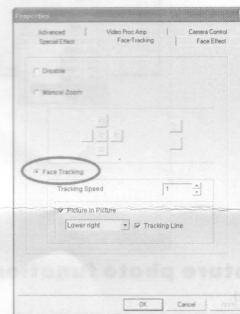


● Face Effects Function.

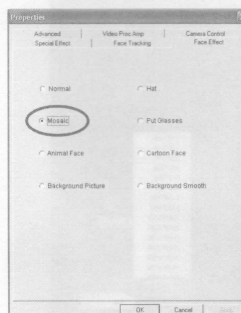


● Image Flip and Environment Frequency Function.

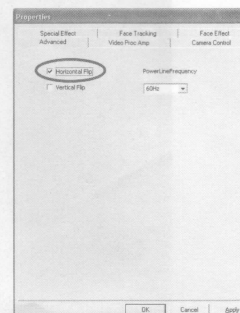


● Color Setting Function.

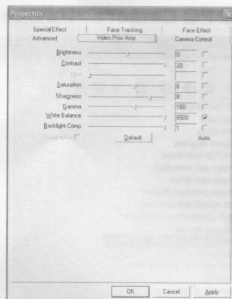


2.2 Please click "Options \Video Capture Pin " to select color format and resolution.

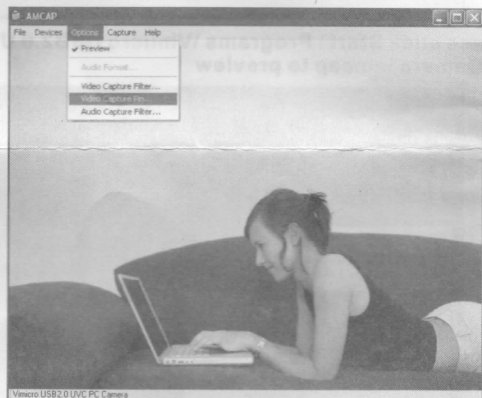

● Color Format Function.

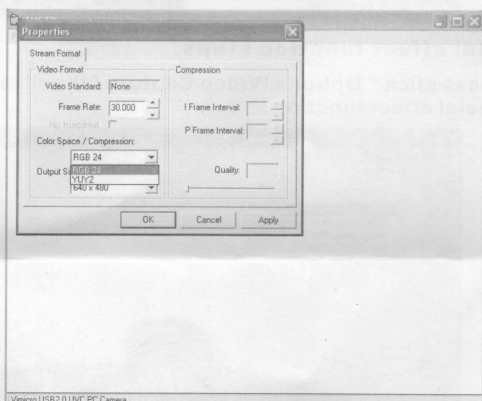


● Preview Resolution Function. (Preview Up to 2560*2048 5.0M)

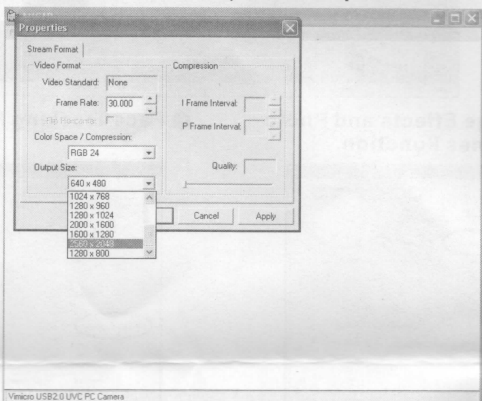

3.Capture photo function steps.

Note !



Please click Windows Desktop "Camera Get Image" icon by mouse (right button) in toolbars and select capture size. (Up to 4608*3456 16M)

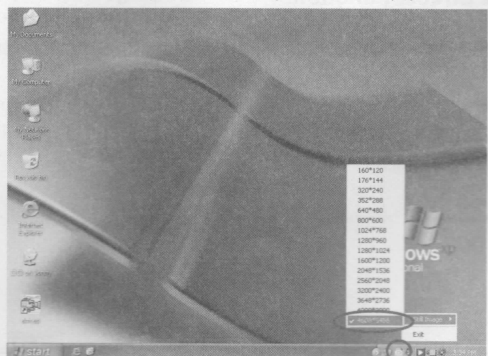

3.1 Please press hardware " Snapshot Button " to capture photo.




3.2 Please click Windows Desktop "Camera Get Image" icon by mouse(right button) in toolbars and select capture size for software capture.

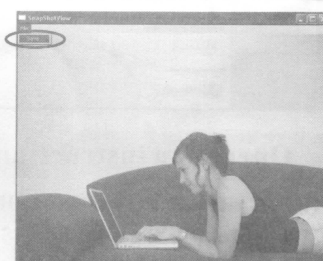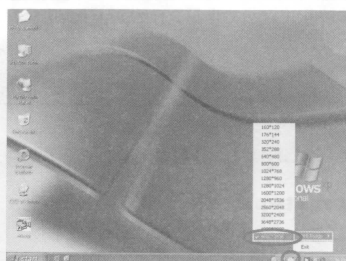


4. Sound Recording function steps.

4.1 Please click Start \ Programs \Accessories \Entertainment \Sound Recorder for microphone uses.

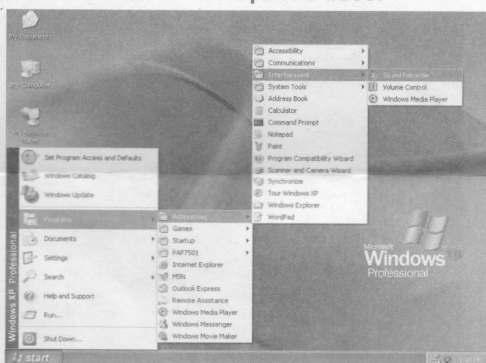

● Please click " " to begin audio recording.

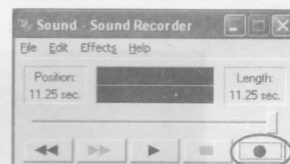

● Please click " " to stop audio recording. Please click " File \Save " to save files.



5. Video Recording function steps.

5.1 Please click "Start Capture" to begin video recording.

